



CARE AND MAINTENANCE

KONTIKI WICKER FURNITURE - CARE AND MAINTENANCE

Product Care Guide

There are a few easy steps you can take to ensure your rattan furniture remains in tip-top condition. Whilst our range is made to last, a little tender loving care can go a very long way in keeping your furniture looking as good as new. Take a look at below guide to see how you can help your rattan furniture look it's best for years to come...

COVER UP

Warranty of our outdoor furniture will be extended to 3 years if you keep an outdoor furniture cover on dust cover when not in use.

GLASS

Glass table top are tempered for safety and durable. It is recommended that glass is not kept in extreme temperatures or direct sunlight.

CUSHION COVERS

Our cushions and scatter cushions are shower proof, removable and machine washable. They are best stored undercover if not being used for long periods (e.g. During winter).

KEEP DRY

During wet period, remove all cushions and store in a dry place.

NATURAL DRYING

Leave the furniture to dry in the sun when possible

WIPE DOWN

Occasionally wipe the rattan furniture with warm soapy water or a mild detergent and rinse with clear water.