




## ASSEMBLY INSTRUCTIONS

PJO-8001-ESP-HB (BASE FOR ISLAND COVE CHAIR)

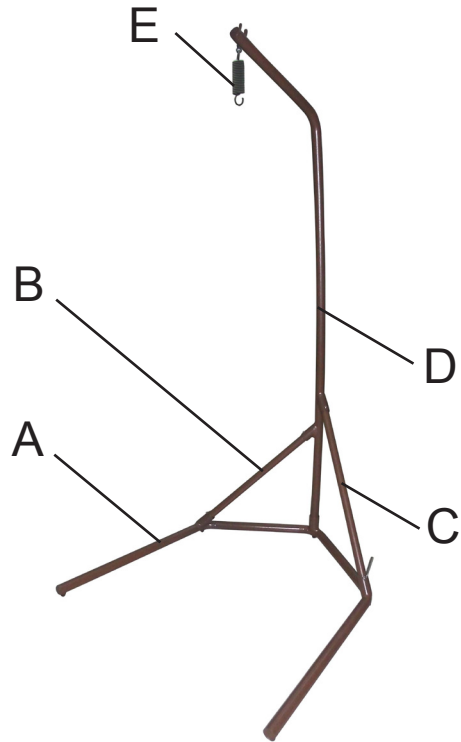


- A. Base (1 unit)
- B. Short pole (1 unit)
- C. Large pole (1 unit)
- D. Top (1 unit)
- E. Spring (1 unit)
- F. Screws (5 units)
- G. Brown screw covers (5 units)
- H. Allen wrench (1 unit)

1. Position base (A) to the short and large pole (B-C).



2. Insert screws (F) to its corresponding hole and manually tighten.

**Important note: Do not tighten all the way.**

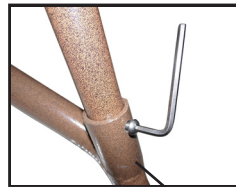

3. Position spring (E) on upper frame.



4. Tighten all screws using the allen wrench provided (H). Then cover the screws (F) with brown plastic covers (G).

