

Reducer

## Technical Information — Sizes

### Reducer


Reducers are used to transition from laminate flooring to floors of different height with a minimum height difference of 1/4 inch. **Available as Standard or Moisture Resistant.**

**Surface Material:** High Wear Resistant Aluminum Oxide Laminate

**Core Material:**

**Standard Reducer:** Moisture Resistant MDF


**Moisture Resistant Reducer:** Exterior Grade Composite Wood Product

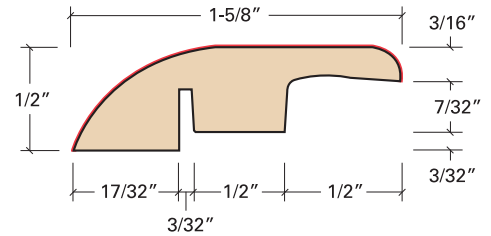

### Versatrack Shim

To be used with T-Molding, Reducer and End Cap in conjunction with the Versatrack (metal) for floors from 9.5mm-12.3mm thickness including 3/32nd underlayment.

**Material:** Standard HDF

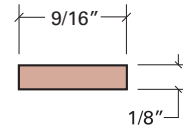


### Versatrack

To be used with T-Molding, Reducer and End Cap for floors from 6mm-9.5mm thickness including 3/32nd underlayment. Also, used in conjunction with the Versatrack Shim for 9.5mm-12.3mm\* including 3/32nd underlayment.

**Material:** Cold Roll Steel


\* For floors thicker than 12.3mm, please feel free to call one of our sales representatives for assistance.

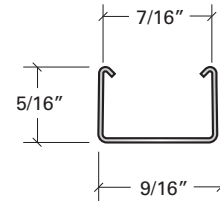

## Installation


### 6 – 9 mm Floors

Use Versatrack (Metal Track) for 6 - 9.5 mm floors.

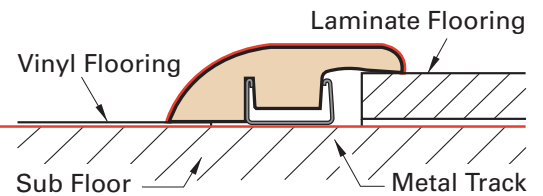


### 9.5 – 12.3 mm Floors

Use Versatrack & Versatrack Shim for 9.5 - 12.3 mm floors. Use the same molding & track, just add 1 Versatrack Shim.

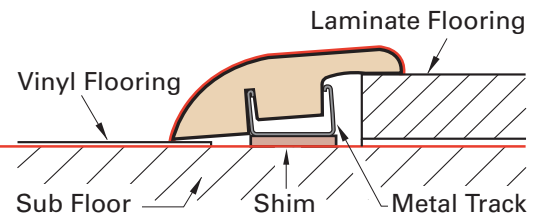

### 14 – 15 mm Floors


Use Versatrack & Versatrack Shim for 9.5 - 12.3 mm floors. Use the same molding & track, just add 2 Versatrack Shim.

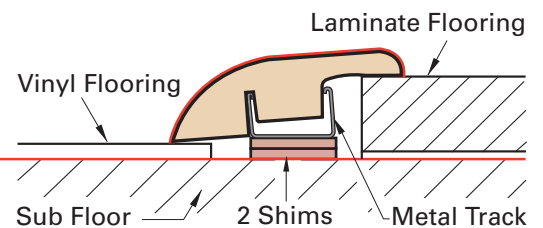

Reducer


Use Versatrack (Metal Track) for 6 - 9 mm floors.

6 - 9 mm Floors

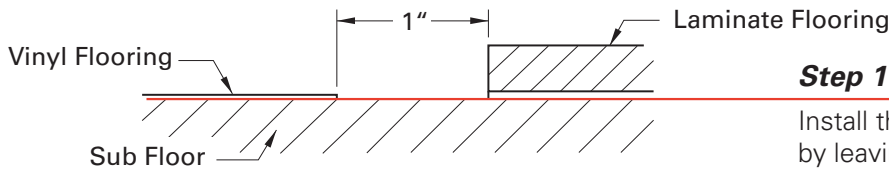


**Step 1**

Install the flooring planks including the underlayment by leaving a 1" inch (25mm) gap between the vinyl and the laminate floor for the installation of the Reducer.

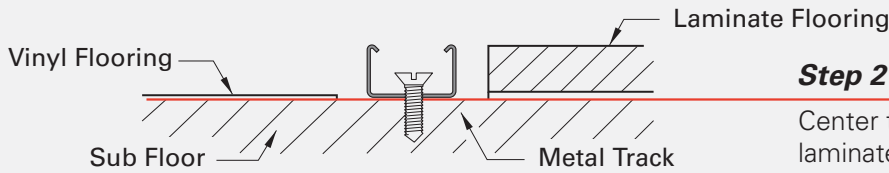

**Step 2**

Center the U-Track between the vinyl and laminate floor and screw it to the sub-floor by using #6x5/8" screws.

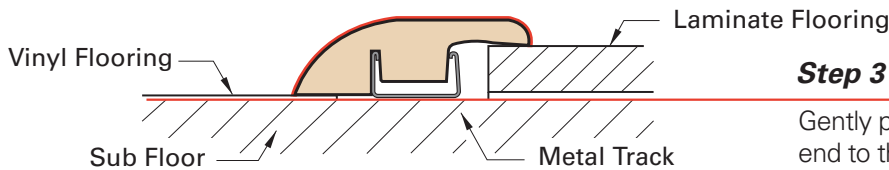



**Step 3**

Gently press the molding into the track starting from one end to the other just like you would close a Zip-Lock bag.

!!! Do not try to push the entire molding in all at once by just pressing it in from top !!!


Use Versatrack & Versatrack Shim for 9.5 - 12.3 mm floors. Use the same molding & track, just add Versatrack Shim.

9.5 - 12.3 mm Floors

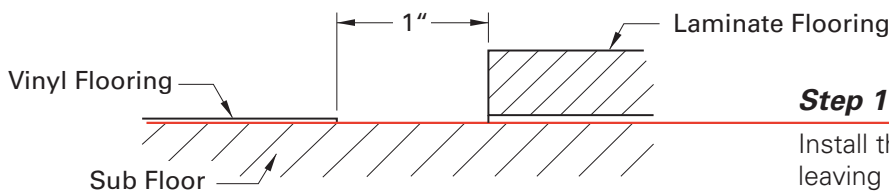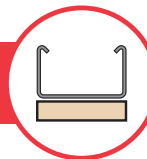


**Step 1**

Install the flooring planks including the underlayment by leaving a 1" inch (25mm) gap between the vinyl and the laminate floor for the installation of the Reducer.

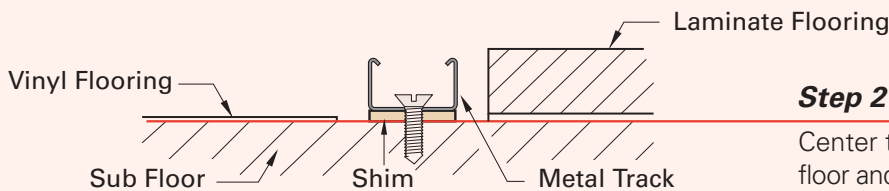

**Step 2**

Center the U-Track and Shim between the vinyl and laminate floor and screw them to the sub-floor by using #6x5/8" screws.

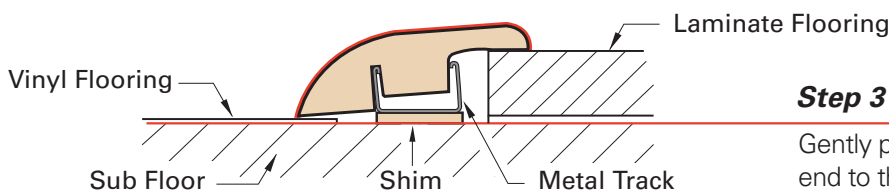


**Step 3**

Gently press the molding into the track starting from one end to the other just like you would close a Zip-Lock bag.


!!! Do not try to push the entire molding in all at once by just pressing it in from top !!!

Reducer

Use Versatrack & Versatrack Shim for 14 - 15 mm floors.  
Use the same molding & track, just add Versatrack Shim.

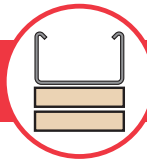


14 - 15 mm Floors

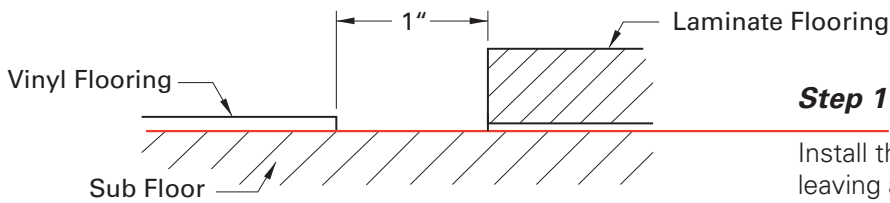


**Step 1**

Install the flooring planks including the underlayment by leaving a 1" inch (25mm) gap between the vinyl and the laminate floor for the installation of the Reducer.

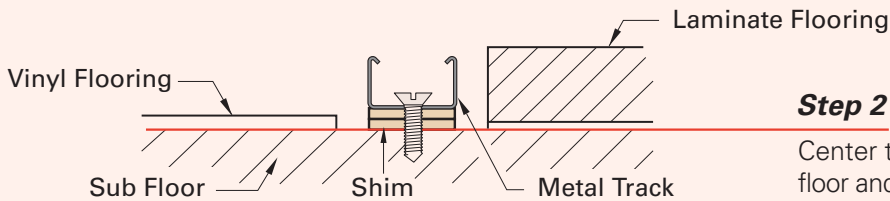

**Step 2**

Center the U-Track and Shim between the vinyl and laminate floor and screw them to the sub-floor by using #6x5/8" screws.

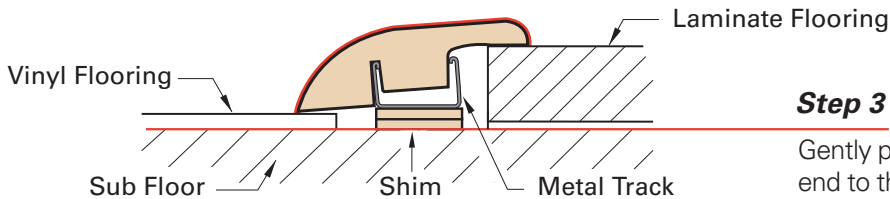

**Step 3**

Gently press the molding into the track starting from one end to the other just like you would close a Zip-Lock bag.

!!! Do not try to push the entire molding in all at once by just pressing it in from top !!!